Webcam Installation Instruction (N Series Printer Only)

Contents:



1. Camera 2. Sticker (7 pcs) 3. Camera Cable 4. Cable Tie (7 pcs)

STEP 1: Attach Zip Ties

Pass cable through the 4 zip ties attached with a sticker. These are used for securing the cable under the top cover.



STEP 2: Fix the Camera

Remove the plastic film from the double side tape on the back side of the camera. Attach the camera at the position marked in picture. (Make sure that the camera is pointed at the print plate.)



STEP 3: Remove Back Cover and Cable Chain

Remove the back panel of the printer with a phillips head screwdriver. The attached side door will also be removed with this panel. Set the panel and screws aside.



AMERICA · ASIA · EUROPE

Remove the 3 fixing screws from the cable chain mounting. These can be found at the end of cable chain on top cover.



STEP 4: Wiring

Pass the camera cable underneath the top cover and remove the tape backing to fix the plastic sticker with zip ties attached.







Drag the end of the cable out from the hole under cable chain with tweezers.





Run the camera cable with the remaining cables underneath the top cover.

Connect the cable to the USB plug at the end of the cable chain and reattach the cable chain mounting at the rear side on the top of the printer.





Setting on RaiseTouch

Update the RaiseTouch to the latest version from the download center on the website: <u>https://www.raise3d.com/pages/download</u>.

The latest version of RaiseTouch will display a new tab with a camera icon.



Press the Camera icon to check whether the camera is connected.







Once the camera is enabled, besides being able to monitor prints in real time from ideaMaker, it will also be possible to record Time-lapse videos. You can check Time-lapses from the Dashboard.



Time-lapse settings can be edited by pressing the Tool button inside Camera page.





Enable 'Auto Connect at Startup' to enable camera automatically after power on.

Enable 'Time-lapse' to record a Time-lapse for each print.

'Time-lapse Interval' refers to the time between each shot during printing.

'Time-lapse Max Frames' refers to the maximum quantity of images saved for one print. When the maximum value is exceeded, the oldest image will be automatically deleted.





Settings in ideaMaker

Click the **Connect** button in ideaMaker to connect ideaMaker with your printer (ensure that your printer is connected to the same network).



Printer Connect					-	×	
		🔁 Remote	Connection				
	Bookmarks		Ð	Scanning			
Raise3D N2	R 1	aise3Dgg 92.168.189.72			X		+
		1 /	′ 1				
		1 /					





Click the setting button and choose Camera.

WWW.RAISE3D.COM

1 Raise3D N2 - Raise3Dgg@192.168.189.72	- 🗆 X								
	· · · · · · · · · · · · · · · · · · ·								
Setting									
Machine O Camera Ethe	ernet 🛜 WLAN ổ Other								
Close									

Click Camera icon to check the current print status.

